



## EDGE HIGH CABINET WHITE PUSH-TO-OPEN

Item number: 1590280

Tall cabinet that opens with push-open that does not require a handle. Inside the cabinet is a drawer in lacquered solid oak and glass shelves with adjustable height. Supplied pre-assembled. The door can be fitted on the right or left side. Why not add power socket 126 72 65.



### DETAILED INFORMATION

<b>Item number</b>		<b>Material and surface treatment</b>	
NOBB	51456682	Front material	MDF
RSK	8938581	Body material	MDF
EAN	7330027103389	Surface treatment	Lacquered
Stocked article	Yes	Surface finish	Matt
<b>Standards and classifications</b>		Color	White
ETIM	EC010013	<b>Packaging dimensions and weight</b>	
<b>Product dimensions and weight</b>		Package height(m)	1,260
Width	400	Package width (m)	0,460
Depth (mm)	250	Package depth(m)	0,310
Height (mm)	1200	Package weight(kg)	26,500
Net weight (kg)	26,5	<b>Miscellaneous</b>	
		Suspension type	Justerbara upphängningsbeslag med väggskena
		Opening function	Push-to-open

### CARE INSTRUCTIONS

In order to keep the furniture in good condition, it is important that you look after it. Our furniture is manufactured from materials with excellent moisture resistance but items should still not be exposed to too much water. Always wipe off any water on the furniture. The simplest way to clean your furniture is to use a moist cloth, perhaps with a little ordinary eco-friendly detergent. Avoid using any detergents and products containing abrasive agents, acids, ammonia, acetone or other chemicals (such as scouring powder, hairspray, hair dye, bleach, hair removal cream and nail varnish remover, etc.). If any of the above items should get on the furniture, they should be removed immediately in order to avoid damage. Avoid having any sharp objects near the furniture that might damage the outer surface.