



## HIGH CABINET STORE PUSH WHITE

Item number: 1390421

Tall cabinet with generous depth. Choose between push-open doors without handles and soft-close doors with handles of your choice. The doors can be fitted on the right or left side, so you can decide which side the door should open. Inside the cabinet there are height-adjustable glass shelves with shelf rests that lock them securely in place.



### DETAILED INFORMATION

<b>Item number</b>		<b>Material and surface treatment</b>	
NOBB	54473773	Main material	Chipboard, MDF, Glass
RSK	8938799	Front material	MDF
EAN	7330027109978	Body material	Chipboard
Stocked article	Yes	Surface treatment	Lacquered
<b>Standards and classifications</b>		Surface finish	Matt
ETIM	EC010013	Color	White
BVB id	178063	<b>Packaging dimensions and weight</b>	
<b>Product dimensions and weight</b>		Package height(m)	1,610
Width	400	Package width (m)	0,460
Depth (mm)	350	Package depth(m)	0,410
Height (mm)	1550	Package weight(kg)	35,500
Hole spacing, handle (mm)	Knopp, CC96, CC128	<b>Miscellaneous</b>	
Net weight (kg)	28	Suspension type	Justerbara upphängningsbeslag med väggskena
Left/right model	Vändbar	Opening function	Push-to-open

### CARE INSTRUCTIONS

In order to keep the furniture in good condition, it is important that you look after it. Our furniture is manufactured from materials with excellent moisture resistance but items should still not be exposed to too much water. Always wipe off any water on the furniture. The simplest way to clean your furniture is to use a moist cloth, perhaps with a little ordinary eco-friendly detergent. Avoid using any detergents and products containing abrasive agents, acids, ammonia, acetone or other chemicals (such as scouring powder, hairspray, hair dye, bleach, hair removal cream and nail varnish remover, etc.). If any of the above items should get on the furniture, they should be removed immediately in order to avoid damage. Avoid having any sharp objects near the furniture that might damage the outer surface.